



# ESPRIT 738 EXPRESS<sup>+</sup>

## PROGRAMMING GUIDE



### SOFTWARE VERSION 3.10

#### KEYPAD TROUBLE DISPLAY

Key "ON" =

- |                            |                                   |
|----------------------------|-----------------------------------|
| [1] No battery/low voltage | [7] Communicator report failure   |
| [2] Power failure          | [8] Timer loss*                   |
| [4] Bell disconnect        | [9] Tamper or zone wiring failure |
| [5] Maximum bell current   | [10] Telephone line failure       |
| [6] Max auxiliary current  | [11] Fire loop trouble            |

\* To clear timer loss trouble, see Key Access Programming [MEM]. Press [CLEAR] to clear troubles.

FIGURE 1


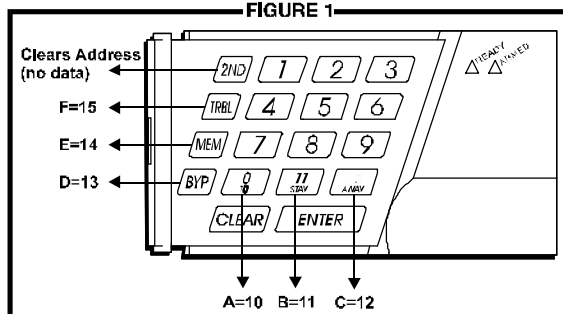



FIGURE 2

#### HEXA DIGIT DATA DISPLAY FOR LED KEYPADS

Note: LCD keypads will display current data on the screen.

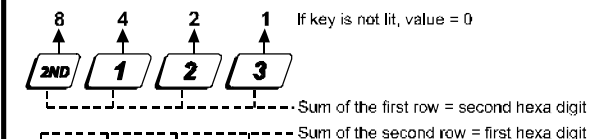

Each key in the first 2 rows of the keypad represents a specific value when the key is lit, as shown above. If the key isn't lit, the key represents 0. The sum of the values of the lit keys in the first row correspond to the second hexa digit. The sum of the values of the lit keys in the second row correspond to the first hexa digit as shown in the example below.

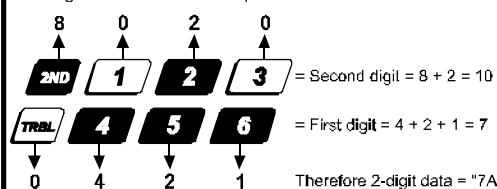

Note: values 10-15 represent hexa digits A - F respectively, see figure 1

## HEXA PROGRAMMING:

Addresses 000 to 043 and 300 to 527 are programmed using the Hexa Programming method. In this mode, you can enter any hexa-digit from 0-F where keys [1] to [9] represent digits 1 to 9 respectively; the other keys represent hexa digits A to F as shown in figure 1. To program using the Hexa Programming method:

- 1) Press [ENTER] + *Installer Code* (default: **737373**)
- 2) The [ENTER] key will flash indicating you are in programming mode
- 3) Enter the desired 3-digit address
- 4) The keypad will display the 2-digit data currently saved at this address as described in figure 2
- 5) Enter 2-digit data; after entering data you do not need to press [ENTER], the software will automatically save the data into the selected address
- 6) Return to **step 2** or press [CLEAR] to exit programming mode

## STREAMLINED SECTION PROGRAMMING

This is an alternate method to Hexa Programming. The addresses (000-043 and 300-527) programmed in the Hexa Programming method are grouped into 67 sections where each section contains four addresses (i.e. section 00 = addresses 000-003). Using this method allows you to program 8 digits (4 addresses) without having to exit and re-enter addresses. Note, the keypad will not display the current data in the Hexa Streamlined Programming method. To program using the Hexa Streamlined Section method:

- 1) Press [ENTER] + *Installer code* (default: **737373**) + [7]
- 2) The [ENTER] and [2ND] keys will flash to indicate you are in programming mode
- 3) Enter **2-digit section** (00-67)
- 4) The [ENTER] key will remain on while the [2ND] key will be off
- 5) Enter **8-digit data** to program the section
- 6) The keypad will "beep" to indicate that the section has been programmed, data is saved and the software has advanced to the next section
- 7) Return to **step 4** or press [CLEAR] to exit programming mode

## INSTALLER CODE (Default **737373**)

Full access to programming, except user access codes. No access to arming/disarming. Use only numeric keys from [1] to [10]. (key [10] = 0)

## PANEL ANSWER OPTIONS

First digit disables "Answering Machine Override" (key [2ND] or key [1]), or determines period of time between first and second call (see table below). Second digit determines number of rings required before panel will answer. If [2ND][2ND] is entered, panel will not answer. (Default value is [2ND] [8].)

Streamline section	Data	Description	Address	ANSWERING MACHINE OVERRIDE
00	___/___	Installer code (1st, 2nd digit)	000	<div><div>[2ND] or [1] = disabled</div><div>[2] = 16 seconds</div><div>[3] = 24 seconds</div><div>[4] = 32 seconds</div><div>[5] = 40 seconds</div><div>[6] = 48 seconds</div><div>[7] = 56 seconds</div><div>[8] to [F] = 60 seconds</div></div>
	___/___	Installer code (3rd, 4th digit)	001	
	___/___	Installer code (5th, 6th digit)	002	
	___/___	Panel answer options	003	
	Number of rings (Max. 15)			

Streamline section	Data	Description	Address	
01	___/___	Panel identifier (1st, 2nd digit)	004	{ Identifies the control panel to the PC.
	___/___	Panel identifier (3rd, 4th digit)	005	
	___/___	PC password (1st, 2nd digit)	006	{ Identifies the PC to the panel.
	___/___	PC password (3rd, 4th digit)	007	

## TELEPHONE AND ACCOUNT NUMBERS

If only one central station phone number is used, program the same number for telephone number 1 and 2. **If only one account number is required, the same number must be entered for both account "A" and "B".** (No Default)

[10] = the number "0"	[BYP] = switch from pulse to tone while dialing
[11] = *	[MEM] = pause 4 seconds
[12] = #	[TRBL] = end of number

## COMPUTER TELEPHONE NUMBER (View at addresses 008 to 015.)

Streamline section	Streamline section
02 ___/___/___/___/___/___/___/___	03 ___/___/___/___/___/___/___/___
1 2 3 4 5 6 7 8	9 10 11 12 13 14 15 16

Press [TRBL] to end phone number if less than 16 digits are programmed.

## CENTRAL STATION TELEPHONE NUMBER 1 (View at addresses 016 to 023.)

Streamline section	Streamline section
04 ___/___/___/___/___/___/___/___	05 ___/___/___/___/___/___/___/___
1 2 3 4 5 6 7 8	9 10 11 12 13 14 15 16

Press [TRBL] to end phone number if less than 16 digits are programmed.

## CENTRAL STATION TELEPHONE NUMBER 2 (View at addresses 024 to 031.)

Streamline section	Streamline section
06 ___/___/___/___/___/___/___/___	07 ___/___/___/___/___/___/___/___
1 2 3 4 5 6 7 8	9 10 11 12 13 14 15 16

Press [TRBL] to end phone number if less than 16 digits are programmed.

## ACCOUNT "A" AND "B": (View at addresses 032 to 035.)

Streamline section	
08 ___/___/___/___ ___/___/___/___	
1 2 3 4 5 6 7 8	
A B	

For 3 digit account numbers, enter "skip" ([2ND]) as first digit.

Streamline section	Data	Description	Address
09	[2ND]/[2ND]	Future use	036
	[2ND]/___	1st digit: value must be entered i.e. [2ND]	037
	___/___	2nd digit: time correction (See table)	038
	___/___	1st digit: telephone 1 format	
	___/___	2nd digit: telephone 2 format	
10	___/___	1st digit: PGM1 type	039
	___/___	2nd digit: PGM2 type	040
	___/___	PGM 1	
	___/___	PGM2	
	___/___	PGM mask 1	
	___/___	PGM mask 2	041
			042
			043

#### TIME CORRECTION:

(address 037 second digit)

[2ND] - No adjustment	[8] - Minus 4 sec.
[1] - Plus 4 sec.	[9] - Minus 8 sec.
[2] - Plus 8 sec.	[10] - Minus 12 sec.
[3] - Plus 12 sec.	[11] - Minus 16 sec.
[4] - Plus 16 sec.	[12] - Minus 20 sec.
[5] - Plus 20 sec.	[BYP] - Minus 24 sec.
[6] - Plus 24 sec.	[MEM] - Minus 28 sec.
[7] - Plus 28 sec.	[TRBL] - Minus 32 sec.

### COMMUNICATOR FORMATS

#### Key

[2ND] = ADEMCO slow (1400Hz, 1900Hz, 10bps)  
 [1] = (1400Hz, 1800Hz, 10bps)  
 [2] = SILENT KNIGHT fast (1400Hz, 1900Hz, 20bps)  
 [3] = SESCOA (2300Hz, 1800Hz, 20bps)  
 [4] = RADIONICS (40bps with 1400Hz handshake)  
 [5] = RADIONICS (40bps with 2300Hz handshake)

[6] = RADIONICS with PARITY (1400Hz, 40bps)  
 [7] = RADIONICS with PARITY (2300Hz, 40bps)  
 [8] = \*ADEMCO express  
 [9] = \*ADEMCO contact ID (programmable codes)  
 [10] = \*ADEMCO contact ID (all codes)  
 [TRBL] = \*DTMF - no handshake (personal dialing)

\* = 4-Digit Codes Only

### PROGRAMMABLE CONTACT ID EVENT CODES

All addresses from 300 to 527 (sections 11 to 67) programmed with values other than [2ND] [2ND] will report the contact ID codes corresponding to the values programmed. Values to be programmed should be selected from this table.

CID	REPORTING CODE	PROG. VALUE	CID	REPORTING CODE	PROG. VALUE
100:	AUXILIARY ALARM	[2ND] / [1]	300:	SYSTEM TROUBLE	[2] / [2]
110:	FIRE ALARM	[2ND] / [2]	301:	AC LOSS	[2] / [3]
111:	FIRE SMOKE	[2ND] / [3]	302:	LOW SYSTEM BATTERY	[2] / [4]
112:	COMBUSTION	[2ND] / [4]	305:	SYSTEM RESET	[2] / [5]
113:	WATER FLOW	[2ND] / [5]	306:	PROGRAM CHANGED	[2] / [6]
114:	HEAT	[2ND] / [6]	309:	BATTERY TEST FAIL	[2] / [7]
115:	PULLSTATION	[2ND] / [7]	320:	SOUNDER/RELAY TROUBLE	[2] / [8]
116:	DUCT	[2ND] / [8]	321:	BELL 1 TROUBLE	[2] / [9]
117:	FLAME	[2ND] / [9]	323:	ALARM RELAY TROUBLE	[2] / [10]
118:	NEAR ALARM	[2ND] / [10]	350:	COMMUNICATION TROUBLE	[2] / [11]
120:	PANIC ALARM	[2ND] / [11]	351:	TELCO 1 FAULT	[2] / [12]
121:	DURESS	[2ND] / [12]	354:	FAIL TO COMMUNICATE	[2] / [BYP]
122:	SILENT PANIC	[2ND] / [BYP]	370:	PROTECTION LOOP TROUBLE	[2] / [MEM]
123:	AUDIBLE PANIC	[2ND] / [MEM]	371:	PROTECTION LOOP OPEN	[2] / [TRBL]
130:	BURGLARY	[2ND] / [TRBL]	372:	PROTECTION LOOP SHORT	[3] / [2ND]
131:	PERIMETER BURG.	[1] / [2ND]	373:	FIRE LOOP TROUBLE	[3] / [1]
132:	INTERIOR BURG.	[1] / [1]	382:	SENSOR TROUBLE	[3] / [2]
133:	24HR BURGLARY	[1] / [2]	383:	SENSOR TAMPER	[3] / [3]
136:	BURGLARY OUTDOOR	[1] / [3]	400:	OPEN/CLOSE	[3] / [4]
137:	BURGLARY TAMPER	[1] / [4]	401:	OPEN/CLOSE BY USER #	[3] / [5]
138:	BURGLARY NEAR ALARM	[1] / [5]	402:	GROUP OPEN/CLOSE	[3] / [6]
140:	GENERAL ALARM	[1] / [6]	403:	AUTOMATIC OPENING/CLOSING	[3] / [7]
150:	24 HOUR AUX	[1] / [7]	404:	LATE TO OPEN/CLOSE	[3] / [8]
151:	GAS DETECTED	[1] / [8]	407:	REMOTE ARM DOWNLOAD	[3] / [9]
152:	REFRIGERATION	[1] / [9]	410:	REMOTE ACCESS	[3] / [10]
153:	LOSS OF HEAT	[1] / [10]	441:	OPEN/CLOSE - STAY MODE	[3] / [11]
154:	WATER LEAKAGE	[1] / [11]	570:	BYPASS	[3] / [12]
155:	FOIL BREAK ALARM	[1] / [12]	572:	24 HOUR ZONE BYPASS	[3] / [BYP]
156:	DAY TROUBLE ALARM	[1] / [BYP]	573:	BURGLARY BYPASS #	[3] / [MEM]
157:	LOW GAS LEVEL	[1] / [MEM]	574:	GROUP BYPASS	[3] / [TRBL]
158:	HIGH TEMPERATURE	[1] / [TRBL]	601:	MANUAL TEST	[4] / [2ND]
159:	LOW TEMPERATURE	[2] / [2ND]	602:	PERIODIC TEST	[4] / [1]
161:	LOSS AIR FLOW	[2] / [1]	625:	TIME/DATE RESET	[4] / [2]

For addresses 044 to 126, see pages 7 to 10.

**REPORTING CODES:** All digits from [1] to [F] are valid. [2ND] = digit will not be reported except for contact I.D. programmable codes. For single digit reporting enter "skip" ([2ND]) as first digit. (Default = "empty" [2ND] [2ND])

**If CONTACT I.D. format (all codes) is selected, addresses 300 to 527 (sections 11- 67) do not have to be programmed.**  
(Select Contact I.D. (all codes) - key [10] for both central station numbers at section 09 - address 038.)

**ARMING (closing) CODES:**

Streamline section	Data	Description	Address
<b>11</b>	—/—	Auto / Espload	<b>300</b>
	—/—	Master	<b>301</b>
	—/—	User code 1	<b>302</b>
	—/—	User code 2	<b>303</b>
<b>12</b>	—/—	User code 3	<b>304</b>
	—/—	User code 4	<b>305</b>
	—/—	User code 5	<b>306</b>
	—/—	User code 6	<b>307</b>
<b>13</b>	—/—	User code 7	<b>308</b>
	—/—	User code 8	<b>309</b>
	—/—	User code 9	<b>310</b>
	—/—	User code 10	<b>311</b>
<b>14</b>	—/—	User code 11	<b>312</b>
	—/—	User code 12	<b>313</b>
	—/—	User code 13	<b>314</b>
	—/—	User code 14	<b>315</b>
<b>15</b>	—/—	User code 15	<b>316</b>
	—/—	User code 16	<b>317</b>
	—/—	User code 17	<b>318</b>
	—/—	User code 18	<b>319</b>
<b>16</b>	—/—	User code 19	<b>320</b>
	—/—	User code 20	<b>321</b>
	—/—	User code 21	<b>322</b>
	—/—	User code 22	<b>323</b>
<b>17</b>	—/—	User code 23	<b>324</b>
	—/—	User code 24	<b>325</b>
	—/—	User code 25	<b>326</b>
	—/—	User code 26	<b>327</b>

Streamline section	Data	Description	Address
<b>18</b>	—/—	User code 27	<b>328</b>
	—/—	User code 28	<b>329</b>
	—/—	User code 29	<b>330</b>
	—/—	User code 30	<b>331</b>
<b>19</b>	—/—	User code 31	<b>332</b>
	—/—	User code 32	<b>333</b>
	—/—	User code 33	<b>334</b>
	—/—	User code 34	<b>335</b>
<b>20</b>	—/—	User code 35	<b>336</b>
	—/—	User code 36	<b>337</b>
	—/—	User code 37	<b>338</b>
	—/—	User code 38	<b>339</b>
<b>21</b>	—/—	User code 39	<b>340</b>
	—/—	User code 40	<b>341</b>
	—/—	User code 41	<b>342</b>
	—/—	User code 42	<b>343</b>
<b>22</b>	—/—	User code 43	<b>344</b>
	—/—	User code 44	<b>345</b>
	—/—	User code 45	<b>346</b>
	—/—	User code 46	<b>347</b>
<b>23</b>	—/—	User code 47	<b>348</b>
	—/—	User code 48 / (Duress)	<b>349</b>
- → See next page			

## REPORTING CODES: (reset code "empty")

### DISARMING (opening) CODES:

Streamline section	Data	Description	Address
	See previous page		
23	—/—	Esplod	350
	—/—	Master	351
24	—/—	User code 1	352
	—/—	User code 2	353
	—/—	User code 3	354
	—/—	User code 4	355
25	—/—	User code 5	356
	—/—	User code 6	357
	—/—	User code 7	358
	—/—	User code 8	359
26	—/—	User code 9	360
	—/—	User code 10	361
	—/—	User code 11	362
	—/—	User code 12	363
27	—/—	User code 13	364
	—/—	User code 14	365
	—/—	User code 15	366
	—/—	User code 16	367
28	—/—	User code 17	368
	—/—	User code 18	369
	—/—	User code 19	370
	—/—	User code 20	371
29	—/—	User code 21	372
	—/—	User code 22	373
	—/—	User code 23	374
	—/—	User code 24	375

Streamline section	Data	Description	Address
30	—/—	User code 25	376
	—/—	User code 26	377
	—/—	User code 27	378
	—/—	User code 28	379
31	—/—	User code 29	380
	—/—	User code 30	381
	—/—	User code 31	382
	—/—	User code 32	383
32	—/—	User code 33	384
	—/—	User code 34	385
	—/—	User code 35	386
	—/—	User code 36	387
33	—/—	User code 37	388
	—/—	User code 38	389
	—/—	User code 39	390
	—/—	User code 40	391
34	—/—	User code 41	392
	—/—	User code 42	393
	—/—	User code 43	394
	—/—	User code 44	395
35	—/—	User code 45	396
	—/—	User code 46	397
	—/—	User code 47	398
	—/—	User code 48 / (Duress)	399

### ALARM CODES ZONES 1 TO 9:

Streamline section	Data	Description	Address
36	—/—	Zone 1	400
	—/—	Zone 2	401
	—/—	Zone 3 (fire add. 100)	402
	—/—	Zone 4	403
37	—/—	Zone 5	404
	—/—	Zone 6	405
	—/—	Zone 7	406
	—/—	Zone 8	407
38	—/—	Zone 9	408
	[2ND]/[2ND]	Future Use	409
	[2ND]/[2ND]	Future Use	410
	[2ND]/[2ND]	Future Use	411

### ZONES 1 TO 9 RESTORE CODES:

Streamline section	Data	Description	Address
42	—/—	Zone 1	424
	—/—	Zone 2	425
	—/—	Zone 3 (fire add. 100)	426
	—/—	Zone 4	427
43	—/—	Zone 5	428
	—/—	Zone 6	429
	—/—	Zone 7	430
	—/—	Zone 8	431
44	—/—	Zone 9	432
	[2ND]/[2ND]	Future Use	433
	[2ND]/[2ND]	Future Use	434
	[2ND]/[2ND]	Future Use	435

Addresses **409-423** reserved for future use.

Addresses **433-447** reserved for future use

## REPORTING CODES: (reset code “empty”)

### ZONES 1 TO 9 SHUTDOWN CODES:

Streamline section	Data	Description	Address
48	—/—	Zone 1	448
	—/—	Zone 2	449
	—/—	Zone 3	450
	—/—	Zone 4	451
49	—/—	Zone 5	452
	—/—	Zone 6	453
	—/—	Zone 7	454
	—/—	Zone 8	455
50	—/—	Zone 9	456
	[2ND]/[2ND]	Future Use	457
	[2ND]/[2ND]	Future Use	458
	[2ND]/[2ND]	Future Use	459

Addresses **457-471** reserved for future use

### TAMPER 1 TO 7 TROUBLE CODES:

Streamline section	Data	Description	Address
54	—/—	Tamper 1	472
	—/—	Tamper 2	473
	—/—	Tamper 3	474
	—/—	Tamper 4	475
55	—/—	Tamper 5	476
	—/—	Tamper 6	477
	—/—	Tamper 7	478
	[2ND]/[2ND]	Future Use	479

Addresses **479-495** reserved for future use

### TROUBLE CODES:

Streamline section	Data	Description	Address
60	—/—	Max. auxiliary current	496
	—/—	Bell disconnect / max. bell current	497
	—/—	Battery disconnect / low voltage	498
	—/—	Power failure	499
	—/—		

Streamline section	Data	Description	Address
61	—/—	Fire loop trouble	500
	—/—	Timer loss	501
	[2ND]/[2ND]	Future Use	502
	[2ND]/[2ND]	Future Use	503
	—/—		

### TROUBLE RESTORE CODES:

Streamline section	Data	Description	Address
62	—/—	Max. auxiliary current	504
	—/—	Bell disconnect	505
	—/—	Battery disconnect / low voltage	506
	—/—	Power failure	507
	—/—		

Streamline section	Data	Description	Address
63	—/—	Fire loop trouble	508
	—/—	Timer programmed	509
	—/—	Tamper / wiring fault	510
	—/—	TLM trouble restore	511
	—/—		

### SPECIAL CODES:

Streamline section	Data	Description	Address
64	—/—	Test report	512
	—/—	Panic 1	513
	—/—	Panic 2	514
	—/—	Panic 3	515
65	—/—	Late to close	516
	—/—	No movement	517
	—/—	Partial arming	518
	—/—	Recent close	519

Streamline section	Data	Description	Address
66	—/—	Duress	520
	[2ND]/[2ND]	Future Use	521
	[2ND]/[2ND]	Future Use	522
	[2ND]/[2ND]	Future Use	523
67	—/—	Log-in (Espload)	524
	—/—	Program change	525
	[2ND]/[2ND]	Future Use	526
	[2ND]/[2ND]	Future Use	527

## DECIMAL PROGRAMMING


- 1) Press **[ENTER] + Installer Code** (Default: **737373**)
- 2) The **[ENTER]** key will flash to indicate you are in programming mode
- 3) Enter **3-digit address** (044-061)
- 4) The keypad will now display the current 3-digit data currently saved at this address as described in figure 3
- 5) Enter **3-digit data** (000-255) value; after entering data you do not need to press **[ENTER]**, the software will automatically save the data into the selected address
- 6) Return to **step 2** or press **[CLEAR]** to exit programming mode

- 044:** \_\_/\_\_/\_\_ (hours) Auto arm time (between "000" and "023")
- 045:** \_\_/\_\_/\_\_ (minutes) Auto arm time (between "000" and "059")
- 046:** \_\_/\_\_/\_\_ (days) Auto test report every ? days (between "001" and "255") (000 = disabled)
- 047:** \_\_/\_\_/\_\_ (hours) Auto test report (between "000" and "023")
- 048:** \_\_/\_\_/\_\_ (minutes) Auto test report (between "000" and "059")
- 049:** \_\_/\_\_/\_\_ (seconds) Exit delay (factory default **60** seconds)
- 050:** \_\_/\_\_/\_\_ (seconds) Entry delay 1 (factory default **45** seconds)
- 051:** \_\_/\_\_/\_\_ (seconds) Entry delay 2 (factory default **45** seconds)
- 052:** \_\_/\_\_/\_\_ (minutes) Bell cut-off time (factory default **5** minutes)
- 053:** \_\_/\_\_/\_\_ ( x 15 mSec.) Zone speed (factory default **600** mSec.)
- 054:** \_\_/\_\_/\_\_ (minutes) Power failure report delay (factory default **30** minutes) (000 = disabled)
- 055:** \_\_/\_\_/\_\_ ( x 15 minutes) "No movement" report time (factory default **8** hours) (000 = disabled)
- 056:** \_\_/\_\_/\_\_ PGM timer setting (001 to 127 for seconds and 129 to 255 for minutes) (factory default **5** seconds)  
Add 128 to desired value in minutes (i.e. for 5 minutes: enter 5 + 128 = 133)
- 057:** \_\_/\_\_/\_\_ Intellizone delay (in seconds, minimum = 10 seconds) (factory default **48** seconds)
- 058:** \_\_/\_\_/\_\_ Installer code lock (147 = locked, 000 = unlocked)
- 059:** \_\_/\_\_/\_\_ (seconds) Programmable delay before alarm transmission (5 to 63 seconds) (000 = disabled)
- 060:** \_\_/\_\_/\_\_ (seconds) Recent closing delay (000 = disabled)
- 061:** \_\_/\_\_/\_\_ Future Use

FIGURE 3


### DECIMAL DISPLAY FOR LED KEYPADS

Note: LCD keypads will display current data on the screen.

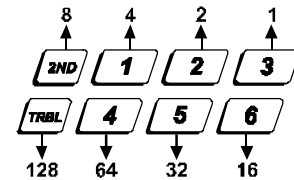

Each key in the first 2 rows of the keypad represents a specific value when the key is lit, as shown above. When the key isn't lit, the key represents 0. Add the values of the lit keys to obtain the entered data value as shown in the example below.

Example

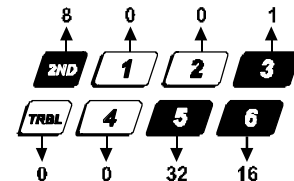

Therefore  $8 + 1 + 32 + 16 = 057$

# FEATURE SELECT PROGRAMMING

Addresses 062 to 126 are programmed using the Feature Select Programming method. In this method, every key on the keypad in each address represents an option or feature. Pressing a key will display it on the keypad and pressing it again will extinguish the key. The On/Off status of each key determines the selected feature. To program using the Feature Select Programming method:

- 1) Press **[ENTER]** + *Installer Code (Default: 737373)*
- 2) The **[ENTER]** key will flash to indicate you are in programming mode
- 3) Enter **3-digit address** (062-126)
- 4) After entering the address, the keypad will display the feature selection status. Turn the keys On/Off by pressing the appropriate key until the desired options are set. Then press the **[ENTER]** key to accept, there will be a confirmation "beep" indicating the options have been accepted. The **[ENTER]** key will flash to indicate that the software is awaiting the next address entry
- 5) Return to **step 3** to continue programming or press **[CLEAR]** to exit programming mode

CODE PRIORITY																	
KEY SELECT:		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	[9]	[10]	[11]	[12]	[BYP]	[MEM]	[TBL]	[2ND]
062:	User #:	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	SYSTEM "A" / STAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
064:	User #:	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	SYSTEM "A" / STAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
066:	User #:	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
	SYSTEM "A" / STAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
068:	User #:	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	SYSTEM "B" / AWAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
070:	User #:	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	SYSTEM "B" / AWAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
072:	User #:	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
	SYSTEM "B" / AWAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
074:	User #:	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	Codes with bypass access	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
076:	User #:	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	Codes with bypass access	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
078:	User #:	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
	Codes with bypass access	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Addresses **080** to **085** for future use.



## FEATURE SELECT PROGRAMMING (continued)

(On/off status of key lights determines which feature is selected.)

### 086:

See "TLM" table -----

PS1/Keyswitch = regular arm -----

PS1/keys switch arming -----

Call back -----

Auto arm on time -----

Auto arm on no movement -----

Pulse dialing -----

Partitioning -----

Silent zone/panic generates a silent alarm

(1:2) Pulse Europe -----

See "Reporting" table -----

N/A

Bell squawk on arm/disarm -----

Auto zone shutdown -----

KEY		
OFF	ON	
<input type="checkbox"/> [2ND]	<input type="checkbox"/>	
<input type="checkbox"/> [1]	<input type="checkbox"/>	
<input type="checkbox"/> [2]	<input type="checkbox"/>	stay arm / System A
<input type="checkbox"/> [3]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [4]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [5]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [6]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [7]	<input type="checkbox"/>	Tone dialing (DTMF)
<input type="checkbox"/> [8]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [9]	<input type="checkbox"/>	generates only a report
<input type="checkbox"/> [10]	<input type="checkbox"/>	(1:1.5) Pulse USA
<input type="checkbox"/> [11]	<input type="checkbox"/>	
<input type="checkbox"/> [12]	<input type="checkbox"/>	
<input type="checkbox"/> [BYP]	<input type="checkbox"/>	N/A
<input type="checkbox"/> [MEM]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [TRBL]	<input type="checkbox"/>	enabled

### TELEPHONE LINE MONITOR

Address 086, Key [2ND] [1]

KEY		
[2ND]	[1]	
OFF	OFF	TLM disabled
OFF	ON	TLM generates trouble only
ON	OFF	generates an alarm if armed
ON	ON	silent alarm becomes audible

(address 086, key [9] has to be OFF)

### 088:

Automatic event buffer transmission. ....

Panic 1 (keys [1] & [3], PS1) -----

Panic 2 (keys [4] & [6]) -----

Panic 3 (keys [7] & [9]) -----

Panic 1 silent (PS1) -----

Panic 2 silent -----

Panic 3 silent -----

Key [10] regular arm -----

Key [11] stay or system A arm -----

6 digit access codes -----

Tamper Recognition -----

Beep on exit delay -----

Report zone restore on bell cut-off -----

Zones with EOL (1K $\Omega$ ) -----

Always report disarm -----

KEY		
OFF	ON	
<input type="checkbox"/> [2ND]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [1]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [2]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [3]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [4]	<input type="checkbox"/>	audible
<input type="checkbox"/> [5]	<input type="checkbox"/>	audible
<input type="checkbox"/> [6]	<input type="checkbox"/>	fire
<input type="checkbox"/> [7]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [8]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [9]	<input type="checkbox"/>	4 digit
<input type="checkbox"/> [10]	<input type="checkbox"/>	
<input type="checkbox"/> [11]	<input type="checkbox"/>	
<input type="checkbox"/> [12]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [BYP]	<input type="checkbox"/>	on zone closure
<input type="checkbox"/> [MEM]	<input type="checkbox"/>	no EOL
<input type="checkbox"/> [TRBL]	<input type="checkbox"/>	only after alarm

### REPORTING OPTIONS

Address 086, Key [11] [12]

KEY	TYPE	DIALING SEQUENCE (tel. No.)
[11]	[12]	
OFF	OFF	Reporting disabled
OFF	ON	Regular reporting - 1,2,1,2,1,2,1,2, fail to comm.
ON	OFF	Split reporting: Alarms* - 1,1,1,1,1,1,1,1, fail to comm.
		System report - 2,2,2,2,2,2,2,2, fail to comm.
ON	ON	Double reporting - 1,1,1,1,1,1,1,1, fail to comm., 2,2,2,2,2,2,2,2, fail to comm.

\*On alarm, all reports are made to Tel. #1 until system is disarmed. (Once disarmed, system reports are made to Tel. #2)

### TAMPER / WIRE FAULT DEFINITIONS

Address 088, Key [10] [11]

SYSTEM ARMED	KEY		SYSTEM DISARMED*
	[10]	[11]	
Alarm as per individual zone definitions	OFF	OFF	Tamper supervision disabled
Always generate trouble and alarm, audible or silent as per individual zone definitions	OFF	ON	No alarm, trouble code reported
	ON	OFF	Silent alarm. Trouble and alarm codes reported
	ON	ON	Audible alarm. Trouble and alarm codes reported**

\* Exception: for 24 hour zones the tamper definition will follow the audible/silent alarm definition of the 24 hour zone.

\*\* Silent zones will generate a silent alarm.

### 090:

Exclude power failure from trouble display

N/A

Auto arm = regular arm -----

N/A

N/A

N/A

N/A

No tamper bypass -----

N/A

N/A

Audible trouble warning -----

Duress -----

Keypad 1 zone supervision -----



Keypad 2 zone supervision -----

N/A

N/A

N/A

KEY		
OFF	ON	
<input type="checkbox"/> [2ND]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [1]	<input type="checkbox"/>	N/A
<input type="checkbox"/> [2]	<input type="checkbox"/>	stay / System A
<input type="checkbox"/> [3]	<input type="checkbox"/>	N/A
<input type="checkbox"/> [4]	<input type="checkbox"/>	N/A
<input type="checkbox"/> [5]	<input type="checkbox"/>	N/A
<input type="checkbox"/> [6]	<input type="checkbox"/>	tamper follows zone bypass definition
<input type="checkbox"/> [7]	<input type="checkbox"/>	N/A
<input type="checkbox"/> [8]	<input type="checkbox"/>	N/A
<input type="checkbox"/> [9]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [10]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [11]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [12]	<input type="checkbox"/>	enabled
<input type="checkbox"/> [BYP]	<input type="checkbox"/>	N/A
<input type="checkbox"/> [MEM]	<input type="checkbox"/>	N/A
<input type="checkbox"/> [TRBL]	<input type="checkbox"/>	N/A

ZONE DEFINITION: (reset = "OFF")									
KEY SELECT:	[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	[9]
Intellizone = ON <b>092</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Silent = ON <b>096</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
24HR/Fire = ON <b>100</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
 Keypad Zones cannot be set as 24hr. Zones  When zone 3 is defined "24 Hour" it becomes a fire zone									
Instant = ON <b>104</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Follow = ON <b>108</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Delay 2 = ON <b>112</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
System A / STAY									
If ON, zone is armed on stay or "system A" arming <b>116</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
System B									
If ON, zone is armed in "system B" arming <b>120</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Bypass enable = ON <b>124</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Zones that are not selected at addresses **100** to **112** become "Delay 1" zones.

**Note:** Do not use the Intellizone feature and an entry delay for the same zone, otherwise an alarm may occur as a user tries to disarm the system.

## KEY ACCESS PROGRAMMING

Programs features quickly, without entering addresses or section numbers.

To activate "key access programming", press **[ENTER]**, followed by installer, master or user code 1. (Code required depends on the feature you wish to access - see below.) Press the key corresponding to the desired feature.

Press **[ENTER]** or **[CLEAR]** to exit.

### key

#### **[8]** Installer test mode *(installer code only)*

In installer test mode, a confirmation beep (intermittent) indicates test is "on", a "rejection" beep (long) indicates test is "off". The bell will squawk during walk testing to indicate opened, functional zones.

#### **[9]** "Auto arming" time program *(all 3 codes)*

Key **[9]** flashes. Enter two digits (00 to 23) for hours + 2 digits (00 to 59) for minutes.

#### **[MEM]** "Panel time" and clear "trouble 8" *(all 3 codes)*

Key **[MEM]** flashes. Enter two digits (00 to 23) for hours + 2 digits (00 to 59) for minutes.

#### **[BYP]** Test report *(all 3 codes)*

Reporting is enabled at address **086**, keys **[11]**, **[12]**. A value must be entered at address **512**, and both telephone and account numbers must be programmed.

#### **[TRBL]** Call Espload via telephone *(all 3 codes)*

Panel identifier and PC password (addresses **004-007**) and computer telephone number (addresses **008-015**) must be programmed.

#### **[AWAY]** Answer Espload *(all 3 codes)*

This feature is available when using the ADP-1 adapter. In Espload, "blind dial" must be activated in "modem setup" section, and panel phone number programmed (works also without ADP-1).

#### **[STAY]** Cancel communication attempts *(master code and user 1 can only stop calls to Espload)* *(installer code - all communications)*

Until next reportable event


When communicating with Espload, it is impossible to enter programming mode.

# CONNECTION DIAGRAMS


The system hardware will recognize the following zone conditions:

## SINGLE ZONE CONNECTIONS


### N.C. Contacts, Without EOL Resistor

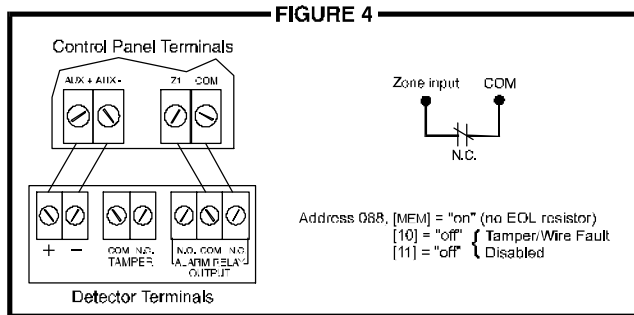


### N.C. Contacts, With EOL Resistor (UL/ULC)

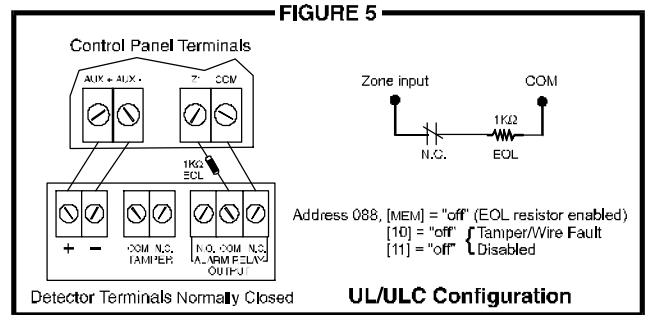



### N.O. Contacts, With EOL Resistor (UL/ULC)

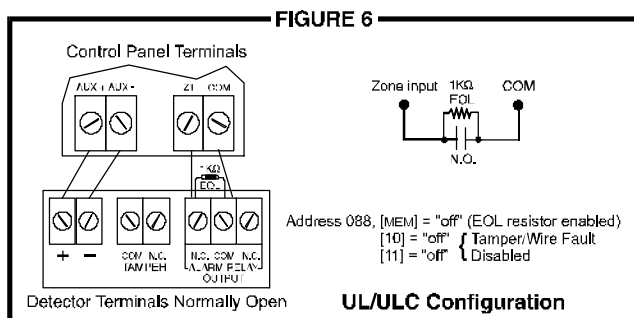

### N.C. Contacts, Without EOL Resistor, With Tamper Recognition

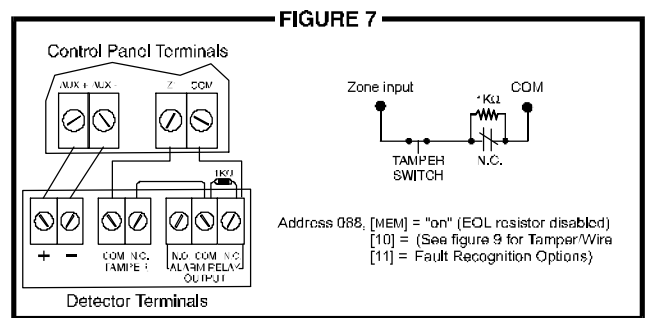

### N.C. Contacts, With EOL Resistor, With Tamper and Wire Fault Recognition (UL/ULC)

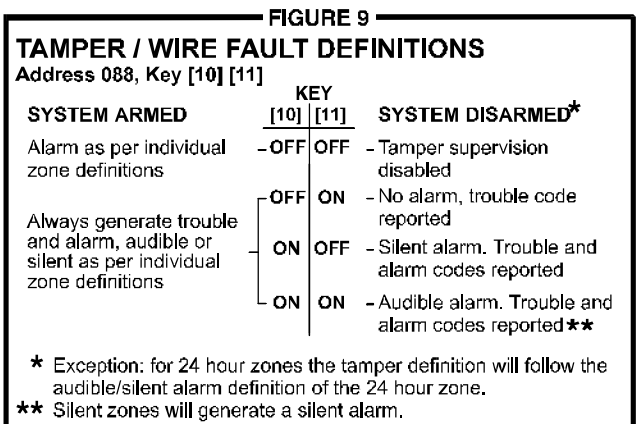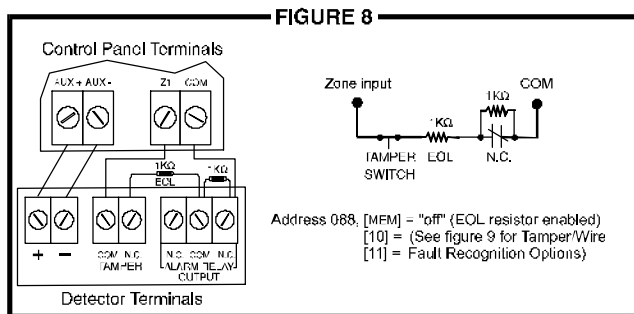


# KEYPAD ZONE CONNECTION DIAGRAMS

Note: Keypad zones always use (1K OHM) EOL resistor.


**FIGURE 10**

## ONE KEYPAD / ONE ZONE

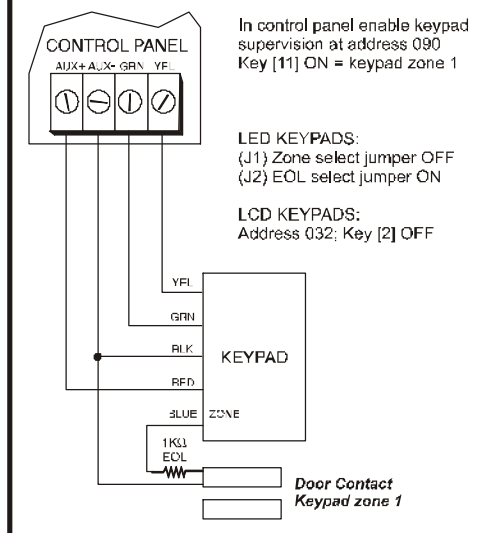


**FIGURE 11**

## TWO KEYPADS / TWO ZONES

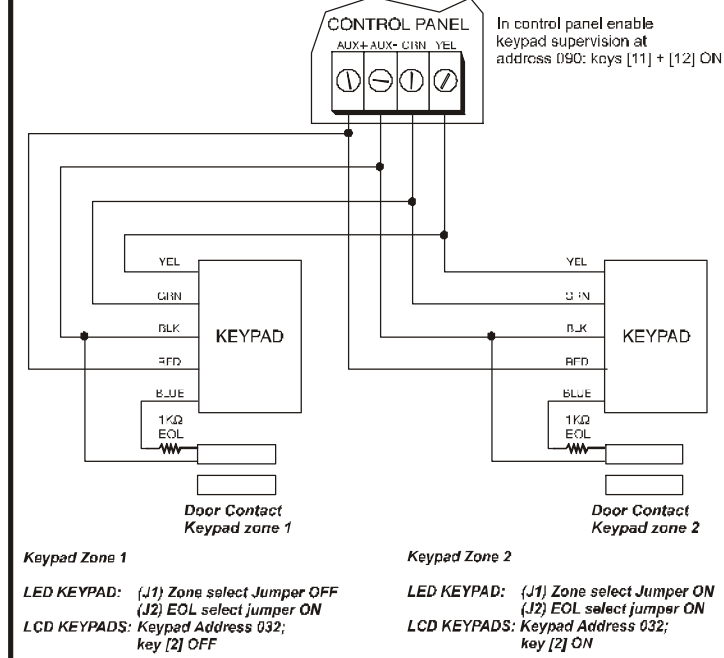

**FIGURE 12**


## 639 LCD KEYPAD ONE KEYPAD (W/ATZ) / TWO ZONES

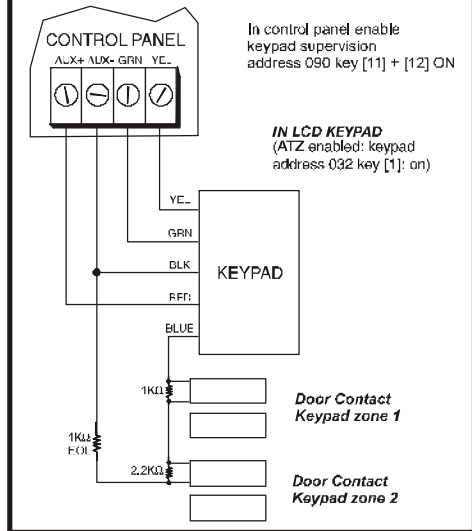

## KEYPAD TAMPER SWITCH

NOTE: To connect the keypad's tamper switch, simply connect the keypad as shown below. If the cover is removed when the system is armed, the keypad will send a zone open and the control panel will generate an alarm.


To corresponding terminals on the control panel.

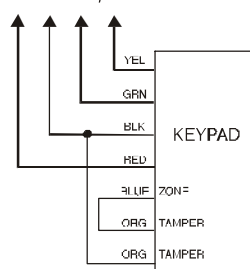

Please note that in all cases, keypad zone supervision must be enabled in the control panel and keypad jumpers J1 and J2 must be set accordingly.

Connecting keypad tamper when no detection device is used.

To corresponding terminals on the control panel.

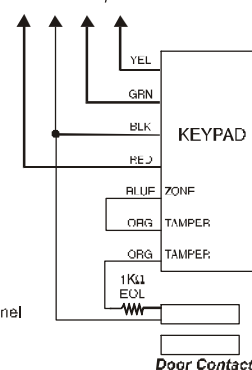


Connecting keypad tamper when using keypad zone.

## ESPRIT 738 EXPRESS WIRING DIAGRAM

Charging and battery test LED  
(every 60 seconds) \


For use with 708, Esprint, and SRI-18 PGM expander.

"TLM" LED: Short flash = OK  
Long flash = Fault  
OFF = Disabled  
Constant = On Line

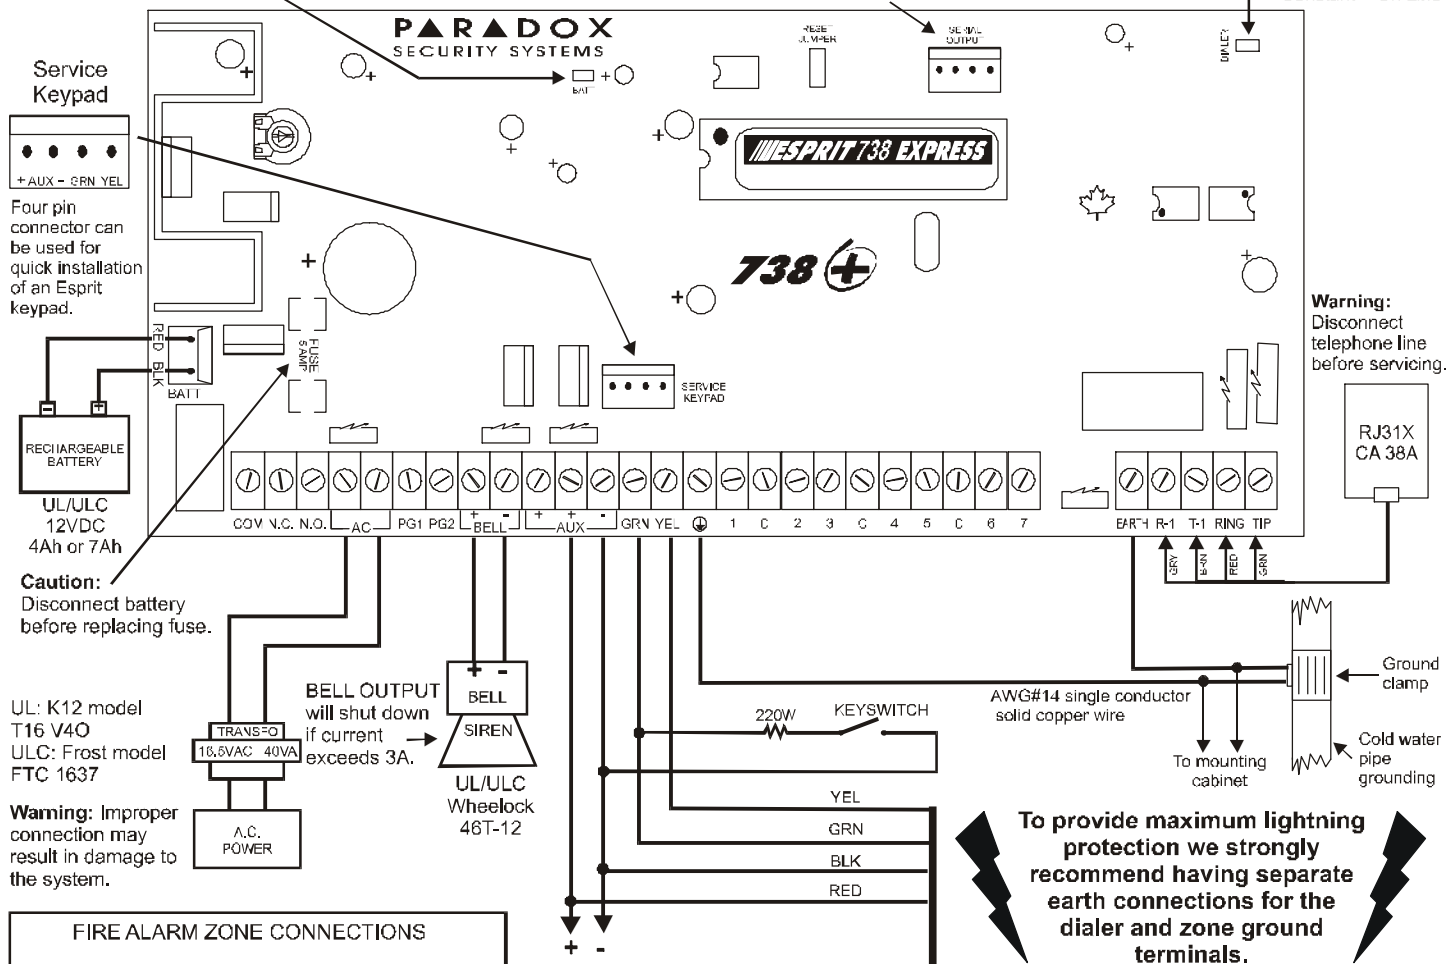

## FIRE ALARM ZONE CONNECTIONS


**Address 100; key [3] on.**  
To set zone 3 as a fire zone.

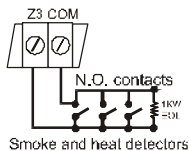

FIRE RESET

To program PGM to conduct a 4 second smoke detector reset when [CLEAR] and [ENTER] are pressed simultaneously:

Address 039 = [BYP] (first digit)  
Address 040 = [5] [0]

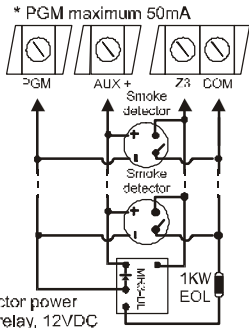

Smoke detector power  
supervision relay, 12VDC


Smoke detector must be 4 wire latching - UL Falcon model 5454, ULC BRK 2412.

Power supervision relay model MR3-UL.

**AUX POWER** 400mA max. 250mA max. for 24 hr. standby. To connect additional wiring to auxiliary power, use the red (+) and black (-) keypad connectors. Aux power will shut down if current exceeds 1A.

All outputs are Class 2 or power-limited, except for the battery terminal. The Class 2 or power-limited fire alarm circuits shall be installed using CL3, CL3R, CL3P, or substitute cable permitted by the National Electrical Code, ANSI/NFPA 70.

## GROUND START CIRCUIT

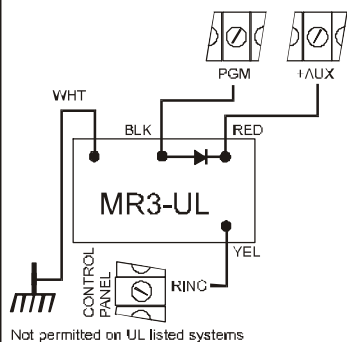

Not permitted on UL listed systems

## PGM OUTPUT RELAY

